FENDER "BANDMASTER" LAYOUT

MODEL 5E7

NOTICE
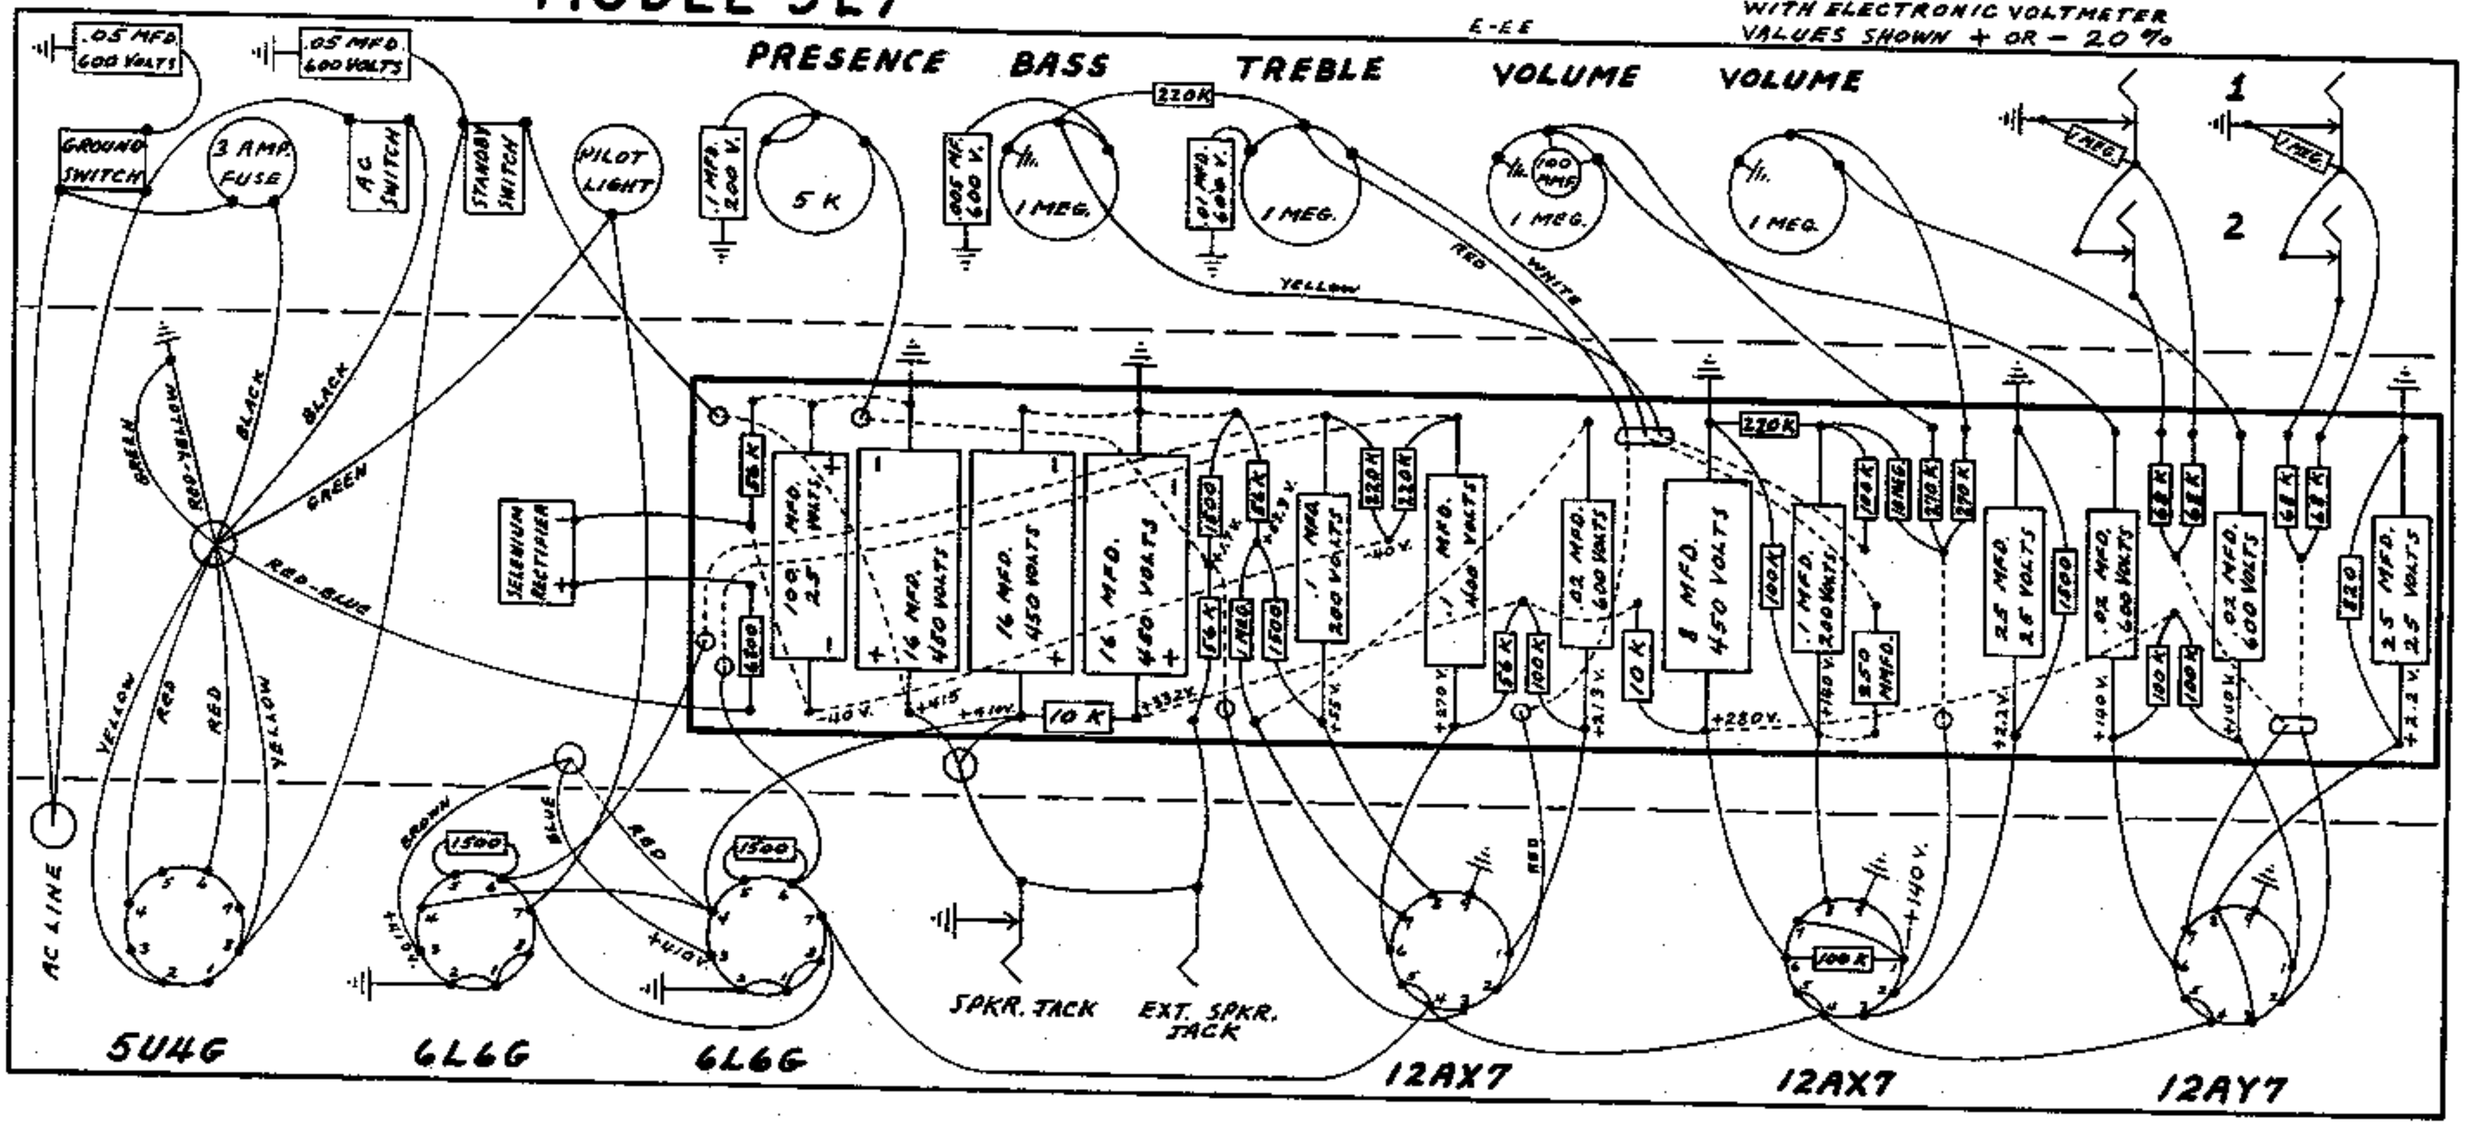
VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMETER
VALUES SHOWN + OR − 20 %